

# TRI-CREASER *DE-LUX*

## INSTRUCTION GUIDE

### THE PACKAGE CONTAINS:


MALE COMPONENT	A
FEMALE COMPONENT	B
SCRIBER	C
INSERTS (Orange)	D
INSERTS (White)	E

## SETTINGS

### INSERT SETTINGS

1. & 2


3, 4, 5, & 6

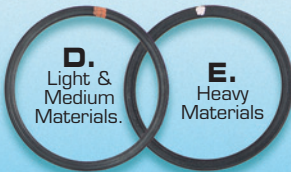

**RUBBER GRIPPERS**  
(To enhance sheet guidance)



Side View

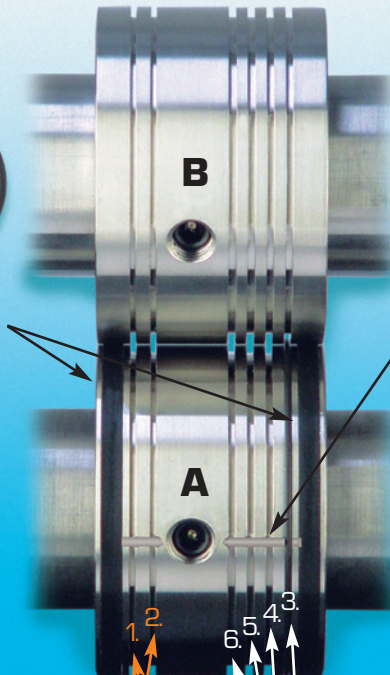

SCRIBER  
**C**



EXTRACTION CHANNEL



Side View

Orange Insert Settings

White Insert Settings









## INSTRUCTION GUIDE

The Tri-creaser De-lux has been designed to produce maximum creasing quality on materials ranging from 100gsm to 350gsm and above.


The device has been pre-set, ready to crease materials  
250 - 300 gsm.

### SET UP AS DIAGRAM SHOWS (OVER LEAF)

If a different creasing width is required locate extraction channel on male component 'A' and gently prise insert from groove by using scribe tool 'C' and choose an alternative setting, see table below for guide.

INSERT SETTING	MATERIAL WEIGHT	COLOUR CODED INSERT
1	100 - 170gsm	ORANGE 
2	170 - 250gsm	ORANGE 
3	250 - 300gsm	WHITE 
4	300 - 350gsm	WHITE 
5	350gsm and above	WHITE 
6	350gsm and above (wide crease option)	WHITE 

### FOR BEST RESULTS CREASE ON TOP OF FOLD

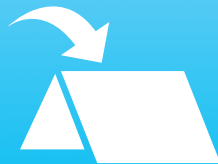

Unit 2, St John's Business Park, Lutterworth, Leicester LE17 4HB

TEL: +44 (0)455 554491

FAX: +44 (0)455 554526

EMAIL: [info@technifold.co.uk](mailto:info@technifold.co.uk) [www.technifold.com](http://www.technifold.com)