


# Adjustable Spine & Hinge Creaser

## using Easy Fit crease Ribs



## Setting procedure

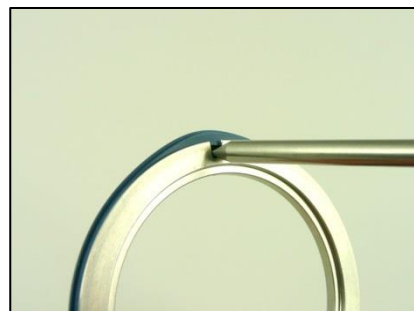

- 4x **Orange** Gripper Crease 100-200gsm
- 4x **Blue** Gripper Crease 200-270gsm
- 4x **Yellow** Gripper Crease 250-350gsm



Orange	100-170gsm
Orange & Blue	150-200 gsm
Blue & Yellow	200-275gsm
Yellow	250-350gsm



Select the male creasing rib colour and insert onto the holder



Select the correct colour coded female for the paper being creased and using the colour red and black spacers obtain the correct hinge distance.



The minimum creasing distance between each individual unit is 4mm the maximum is 17mm



Using the same colour coded crease ribs and females the top and bottom units should aligned together