


TRI-CREASER DE-LUX

INSTRUCTION GUIDE

THE PACKAGE CONTAINS:

MALE COMPONENT	A
FEMALE COMPONENT	B
SCRIBER	C
INSERTS (Orange)	D
INSERTS (White)	E

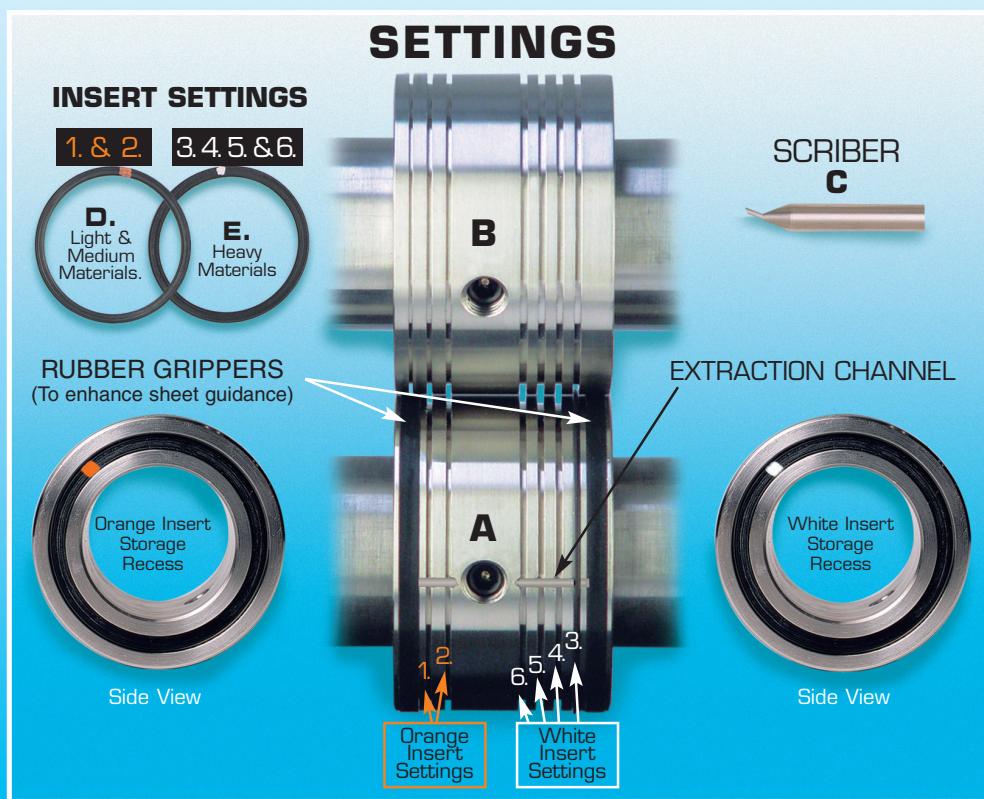

FREE TRIAL - TEST OUR NEWLY DEVELOPED GRIPPER CREASE

(see over leaf for details)

INSTRUCTION GUIDE

The Tri-creaser De-lux has been designed to produce maximum creasing quality on materials ranging from 100gsm to 350gsm and above.

The device has been pre-set, ready to crease materials 250 - 300 gsm.

SET UP AS DIAGRAM SHOWS (OVER LEAF)

If a different creasing width is required locate extraction channel on male component '**A**' and gently prise insert from groove by using scriber tool '**C**' and choose an alternative setting, see table below for guide.

INSERT SETTING	MATERIAL WEIGHT	COLOUR CODED INSERT
1	100 - 170gsm	ORANGE
2	170 - 250gsm	ORANGE
3	250 - 300gsm	WHITE
4	300 - 350gsm	WHITE
5	350gsm and above	WHITE
6	350gsm and above (wide crease option)	WHITE

FOR BEST RESULTS CREASE ON TOP OF FOLD



7 ELLIOT CLOSE WHETSTONE LEICESTERSHIRE LE8 6QX UNITED KINGDOM
TEL:+44 (0)116 275 1440 MOBILE: 07703 597365 FAX: +44 (0)116 286 3353
EMAIL: info@technifold.co.uk www.perfectprintfinishing.com

NEW

Introducing the recently developed
GRIPPER CREASE

Improves crease quality on paper stock (80 - 200gsm) with:

- UV varnish
- Toner based digital applications
- Oven baked web processes

How to use

1. Simply extract rubber gripper band next to setting number 1 (see over leaf).
2. Insert new gripper crease and match against new narrow groove on female component (B).



FREE TRIAL

Heavy crease option
also available on
request

CALL US NOW