


Tech-ni-Fold Micro-Perforator Tool Kiss-Cut Attachment

Converting your Tech-ni-Fold Micro-Perforator to a Kiss-Cutting Device is quick and easy.

Kiss-Cutting both self-adhesive label stock and thicker card stocks is now possible on your folding machine.

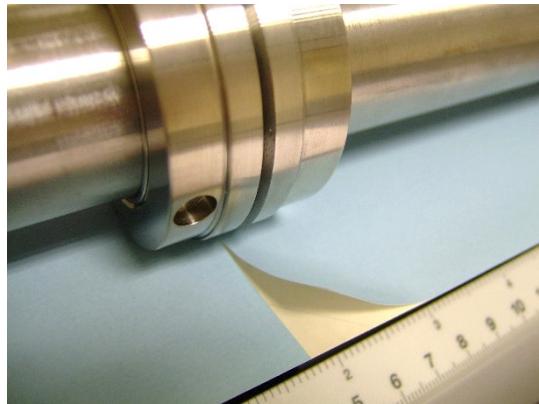

Kiss-Cutting on self-adhesive label stock



Kiss-Cutting on card stock

Instructions

1. Setup the Micro-Perforator Blade Holder as you would for a Micro-Perforation job, but instead replace with the supplied Kiss-Cutting Blade

**Please take extra care removing the Kiss-Cutting Blade from the packaging.
The Blades are extremely sharp.**

2. Install the Black Nylon Sleeve to the Female Sleeve Holder component
3. Install both the Blade Holder Component and the Nylon Holder Component to the shafts of the machine as per normal installation procedure
4. Set the usual shaft pressures according to the stock you are processing through the machine and run a sheet through
5. Check the kiss-cut (half-cut) result achieved on the sheet is as required
6. Adjust the pressures on the machine to increase or decrease cut penetration

**For greater cut depth then experiment with
replacing the Blue Nylon Sleeve for the Black Nylon Sleeve.**