

TRI-CREASER DE-LUX


INSTRUCTION GUIDE

THE PACKAGE CONTAINS:

MALE COMPONENT	A
FEMALE COMPONENT	B
SCRIBER	C
INSERTS (Red)	D
INSERTS (Pink)	E

SETTINGS

INSERT SETTINGS

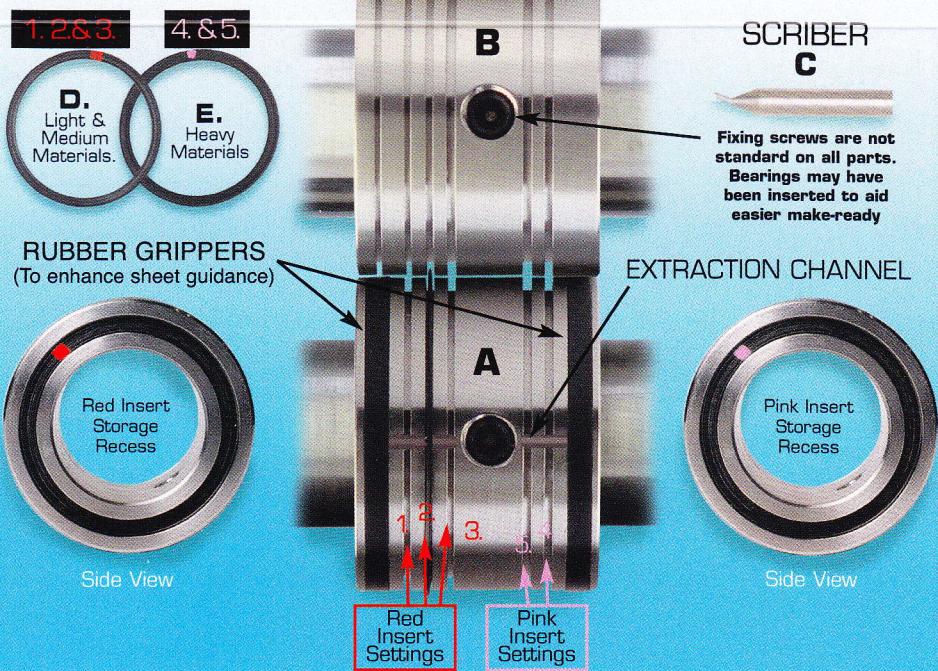

FREE TRIAL - TEST OUR NEWLY DEVELOPED GRIPPER CREASE
(see over leaf for details)

INSTRUCTION GUIDE

The Tri-creaser De-lux has been designed to produce maximum creasing quality on materials ranging from 100gsm to 350gsm and above.

The device has been pre-set, ready to crease materials 170 - 250gsm.

SET UP AS DIAGRAM SHOWS (OVER LEAF)

If a different creasing width is required locate extraction channel on male component 'A' and gently prise insert from groove by using scriber tool 'C' and choose an alternative setting, see table below for guide.

INSERT SETTING	MATERIAL WEIGHT	COLOUR CODED INSERT
1	100 - 170gsm	RED 
2	170 - 250gsm	RED 
3	170 - 270gsm (wide crease option)	RED 
4	270 - 350gsm	PINK 
5	300gsm and above (wide crease option)	PINK 

FOR BEST RESULTS CREESE ON TOP OF FOLD



7 ELLIOT CLOSE WHETSTONE LEICESTERSHIRE LE8 6QX UNITED KINGDOM
TEL: +44 (0)116 275 1440 MOBILE: 07703 597365 FAX: +44 (0)116 286 3353
EMAIL: info@technifold.co.uk www.perfectprintfinishing.com

NEW

Introducing the recently developed **GRIPPER CREESE**

Improves crease quality on paper stock
(80 - 200gsm) with:

- UV varnish
- Toner based digital applications
- Oven baked web processes

How to use

1. Simply extract rubber gripper band next to setting number 1 (see over leaf).
2. Insert new gripper crease and match against new narrow groove on female component (B).



FREE TRIAL

Heavy crease option
also available
on request

CALL US NOW